


How to Use Your Digital Recorder

Hold Switch
This feature turns



Rewind
Rewinds in short increments making it easier to locate a segment in a long recording for review.

Fast Forward
Fast forwards in short increments making it easier to locate a segment in a long recording for review.

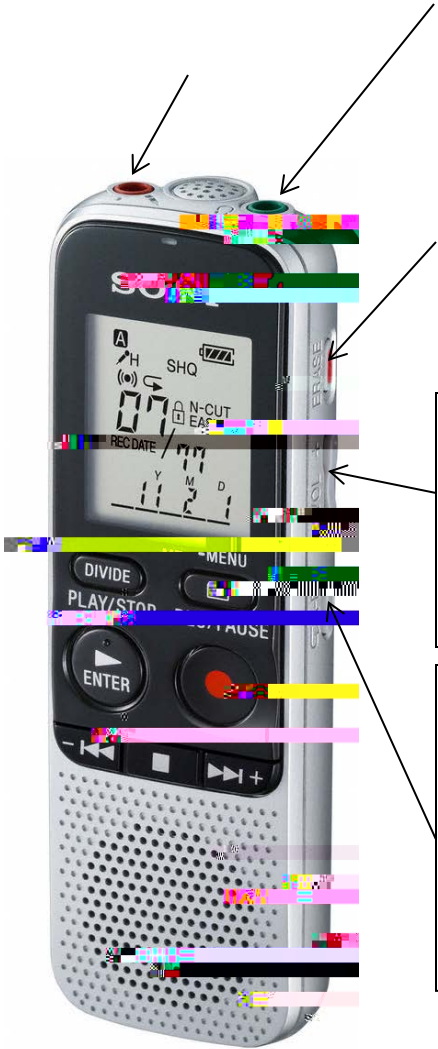

Hold the erase button down until it beeps. Then press it one more time to delete the selected recording.

Volume
Press the volume button up or down depending on whether you would like to increase or decrease the volume.

A-B Repeat
Mark the beginning and ending of a particular recorded passage and the recording will be played over and over again (great for learning a language!)